



Wet System

When a sprinkler (1) opens, the discharging water lifts the alarm valve clapper (2) and flows through the alarm port (3) to the retard chamber (4). When the retard chamber is filled, water flows to the water motor alarm (5) and/or the optional pressure switch (6) which signals an electric alarm bell.